

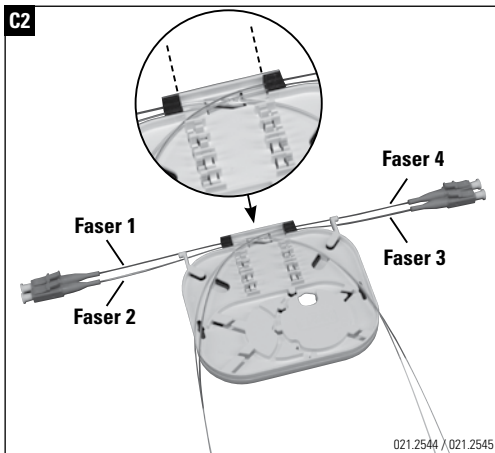
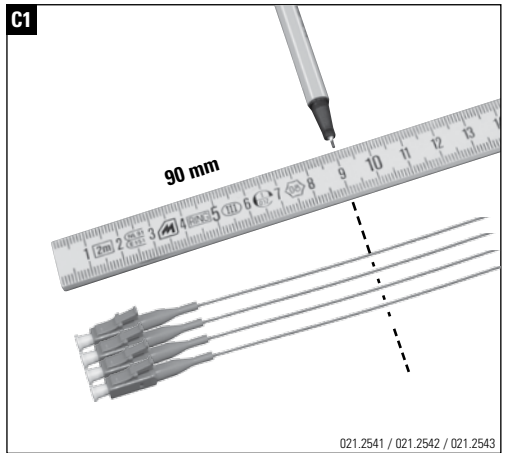
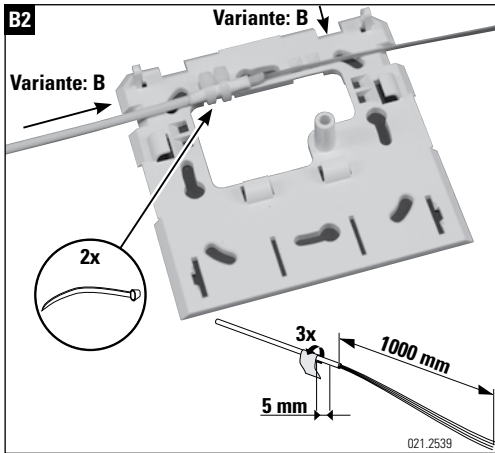
 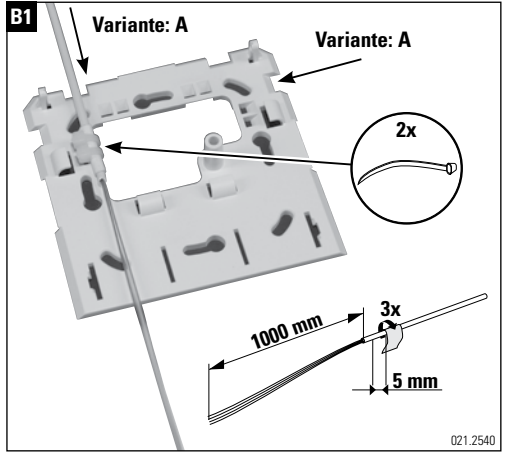
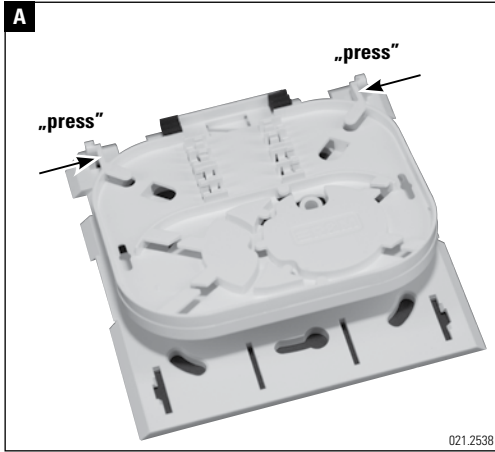


Installationsanleitung FO-Spleissdose (2-Port) für FTTH  
Installation guide FO Splice Outlet (2-port) for FTTH  
Instructions de montage Boîte d'épissure FO (2-port) pour FTTH




**D1 Variante: A**

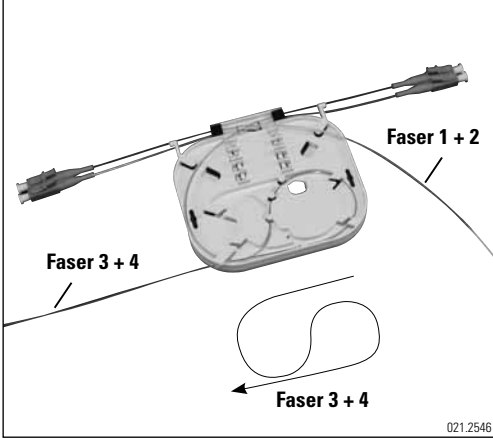


021.2546

**D2 Variante: A**

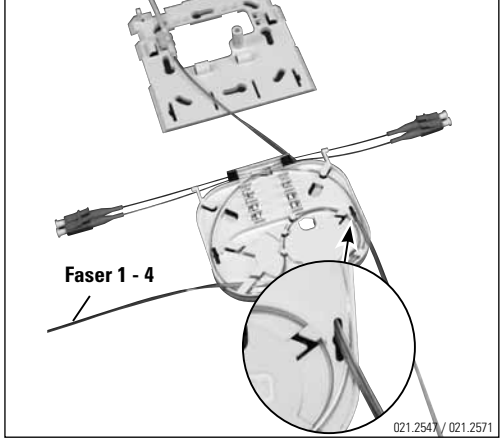


021.2547 / 021.2571

**D3**

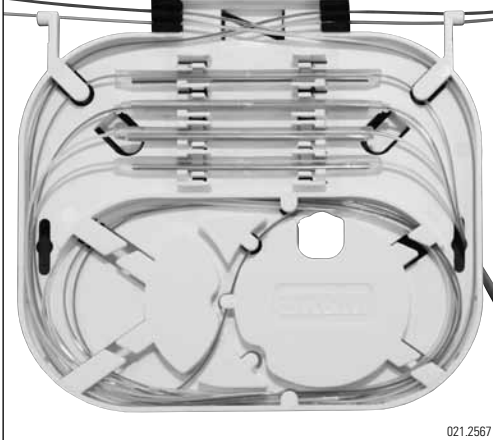


021.2567

**D4 Variante: A**

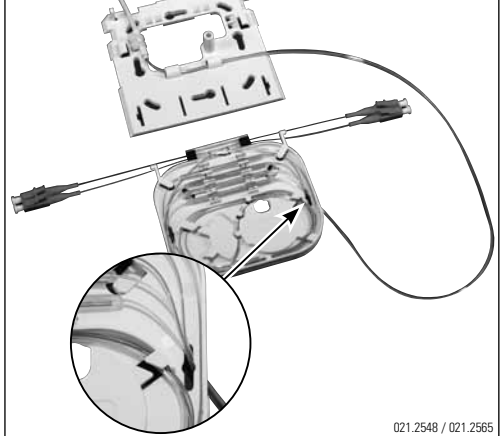


021.2548 / 021.2565

**D5 Variante: A**

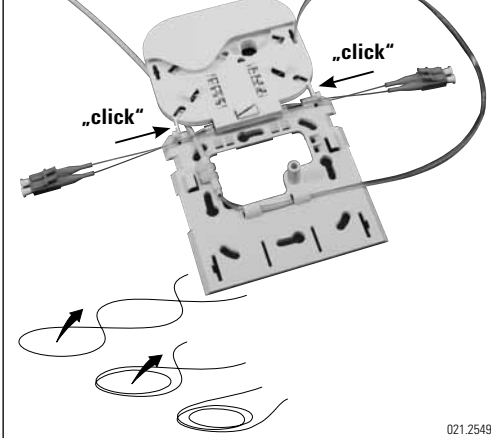


021.2549

**D6 Variante: A**

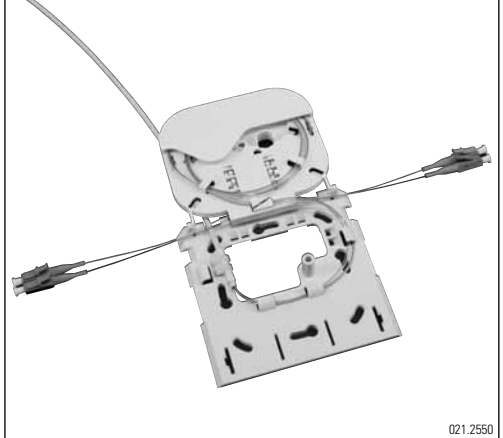


021.2550

**E1 Variante: B**

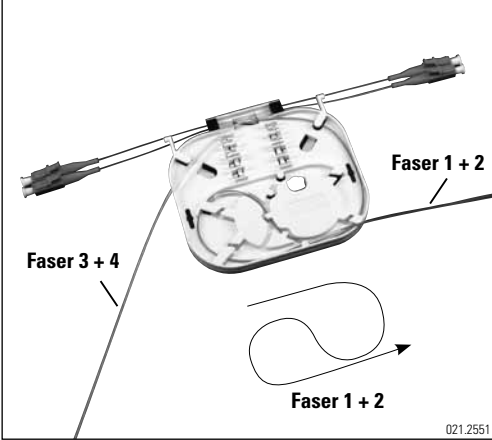


**E2 Variante: B**

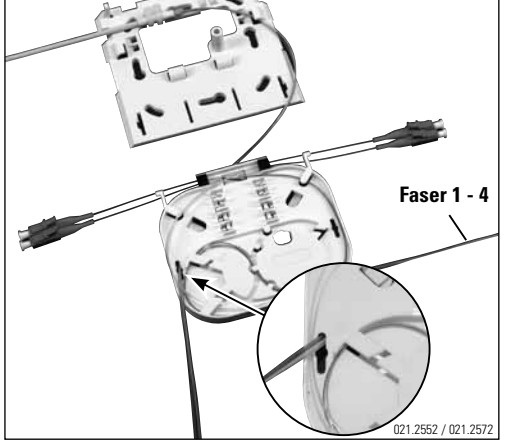


**E3**




**E4 Variante: B**




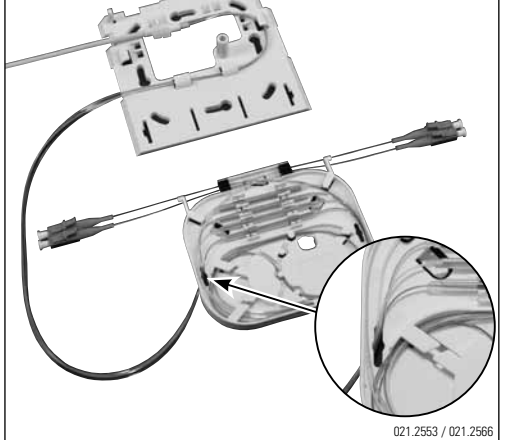


**E5 Variante: B**

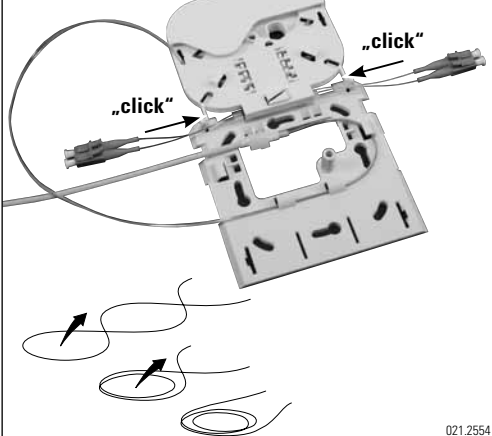

**E6 Variante: B**

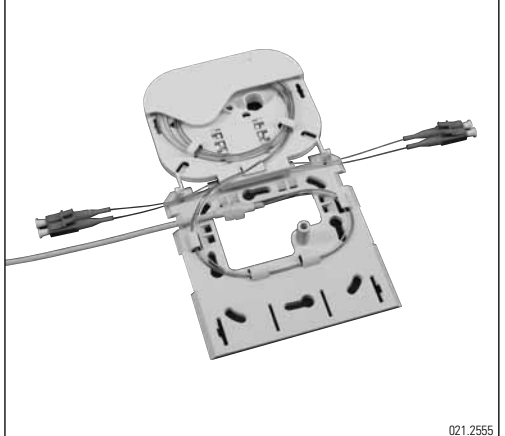

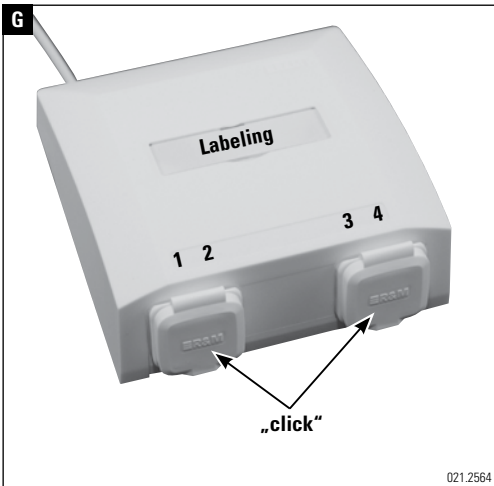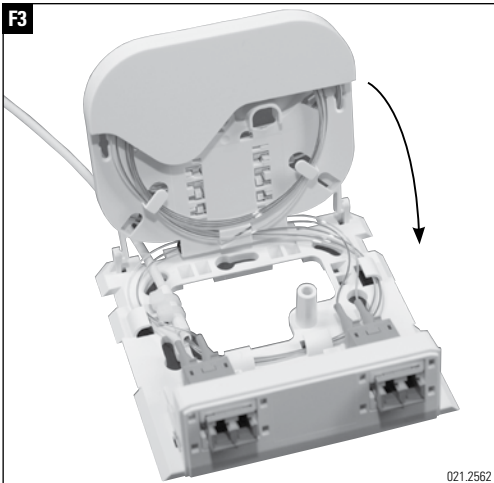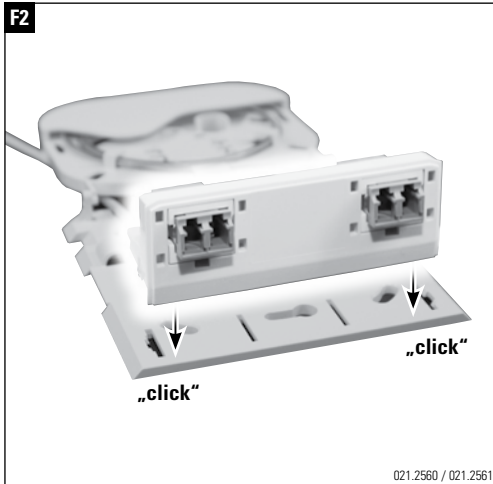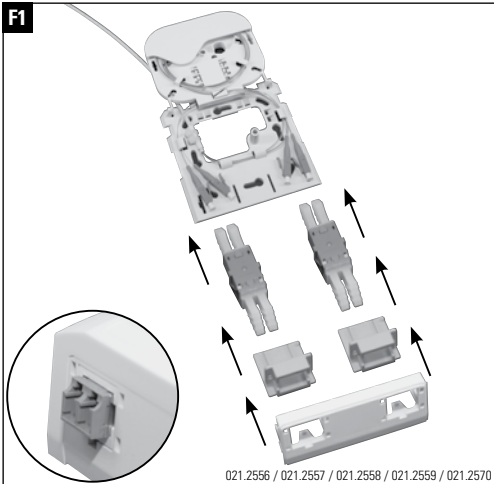

**Headquarters**

**Switzerland**

Reichle & De-Massari AG  
 Binzstrasse 32  
 CHE-8620 Wetzikon  
 Telephone HQ +41 (0)44 933 81 11  
 Telefax HQ +41 (0)44 930 49 41  
 E-Mail [hq@rdm.com](mailto:hq@rdm.com)

[www.rdm.com](http://www.rdm.com)

