
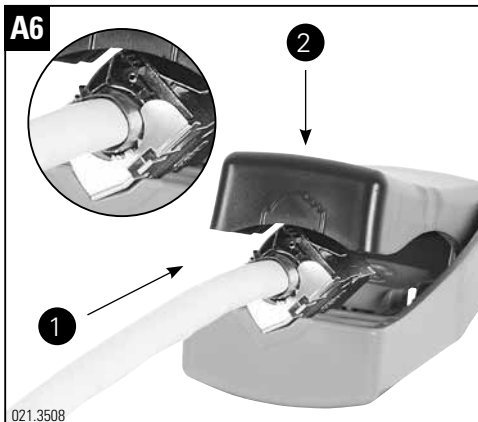
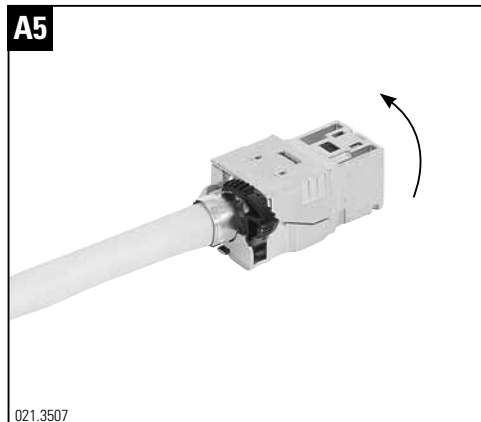
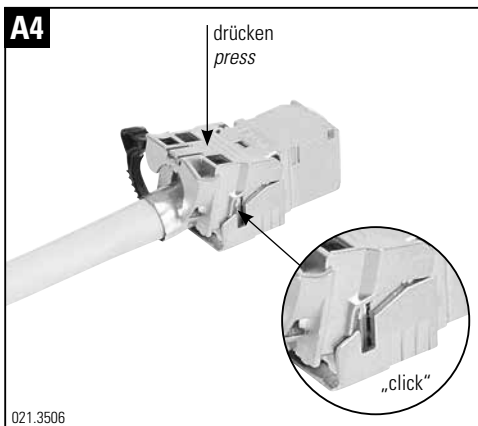
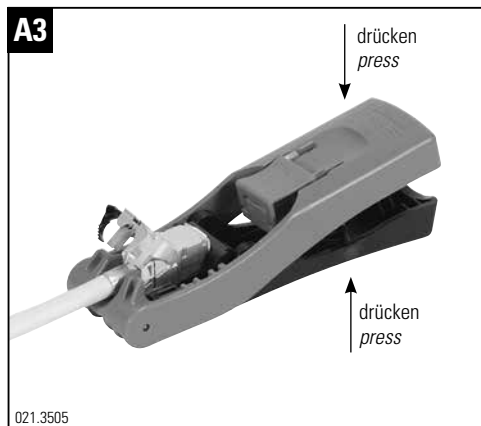
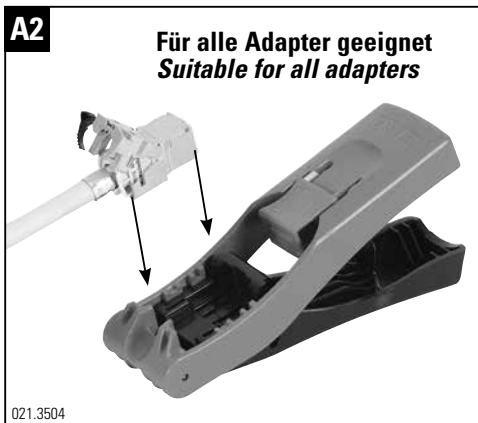
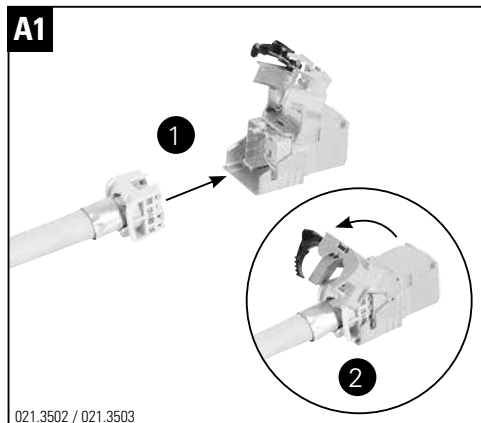












Bedienungsanleitung Beschaltungswerkzeug – Kat.6_A EL
User manual Termination Tool – Cat.6_A EL
D'usage pour l'outil de câblage – Cat.6_A EL

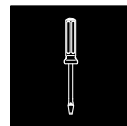

Bedienungsanleitung Öffnungstool Modul Kat.6_A EL

User manual Opening Tool Module Cat.6_A EL

D'usage pour l'outil d'ouverture Module Cat.6_A EL

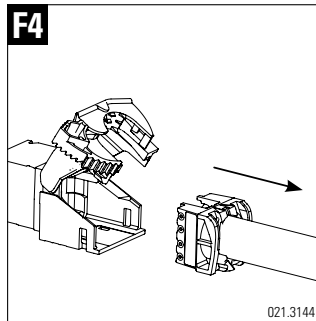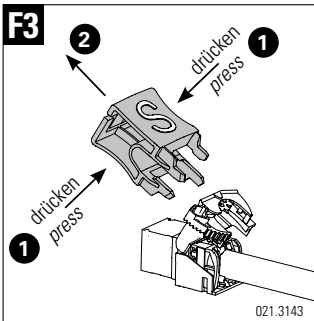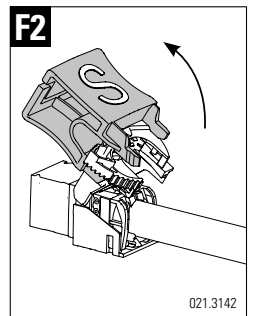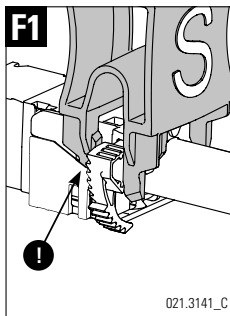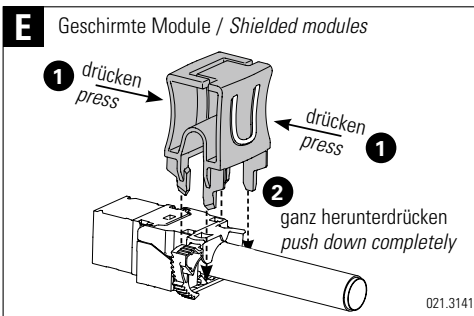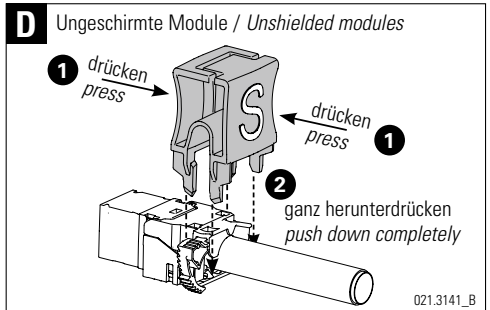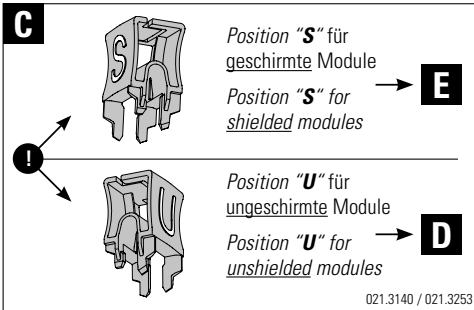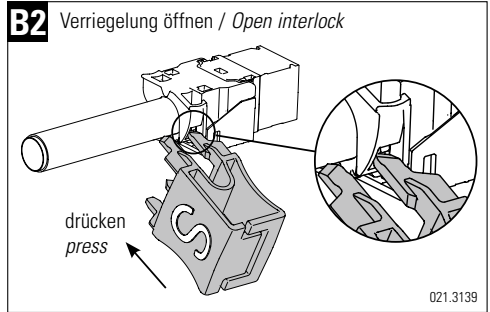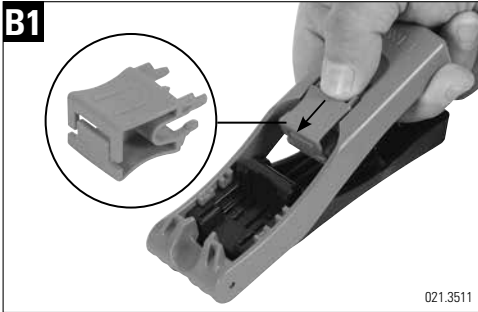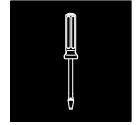

Headquarters

Switzerland

Reichle & De-Massari AG

Binzstrasse 32

CHE-8620 Wetzikon

Telephone HQ +41 (0)44 933 81 11

Telefax HQ +41 (0)44 930 49 41

E-Mail hq@rdm.com

www.rdm.com

R&M