






Installation guide Netscale Module without RCM




Installationsanleitung Netscale Modul ohne RCM

Instructions de montage Netscale Module without RCM

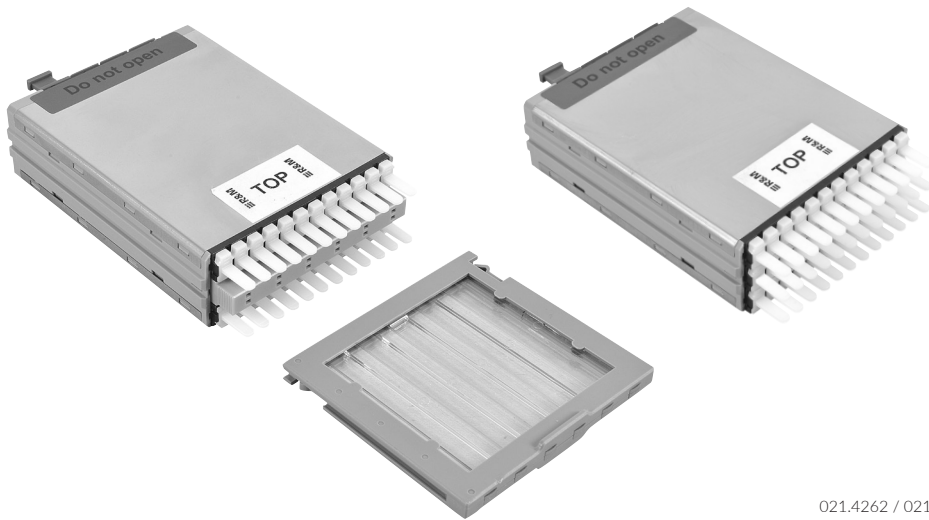

021.4262 / 021.4261

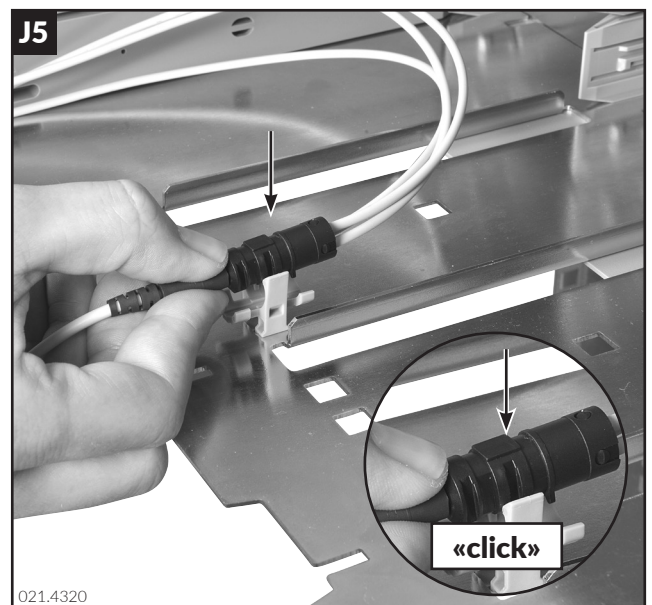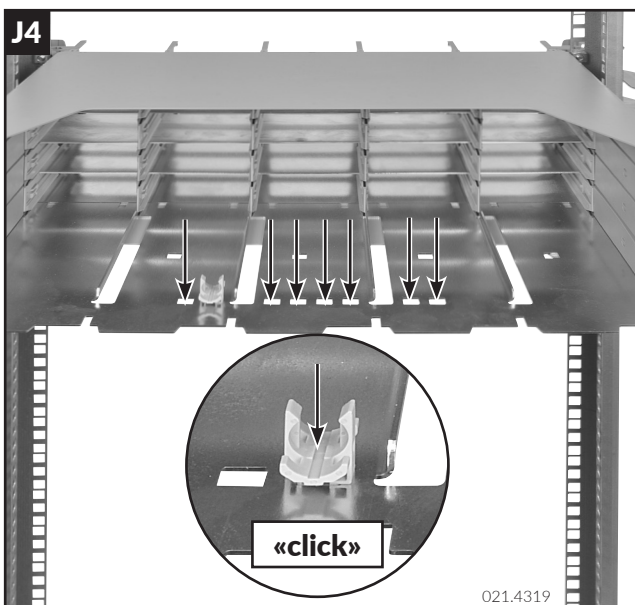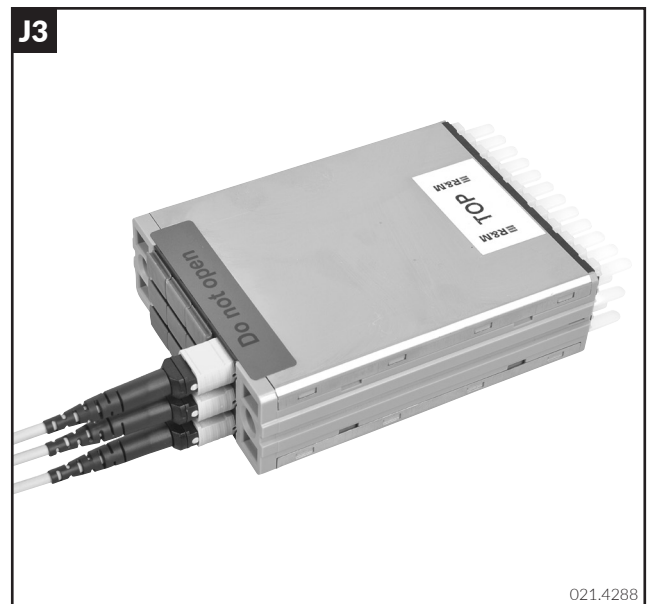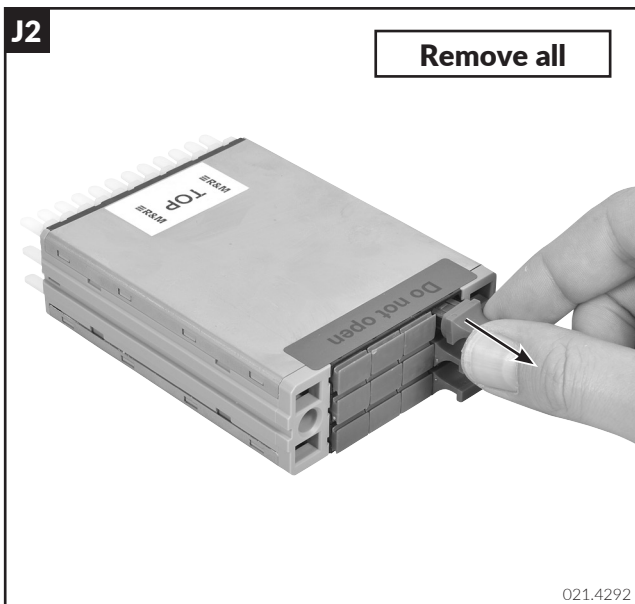

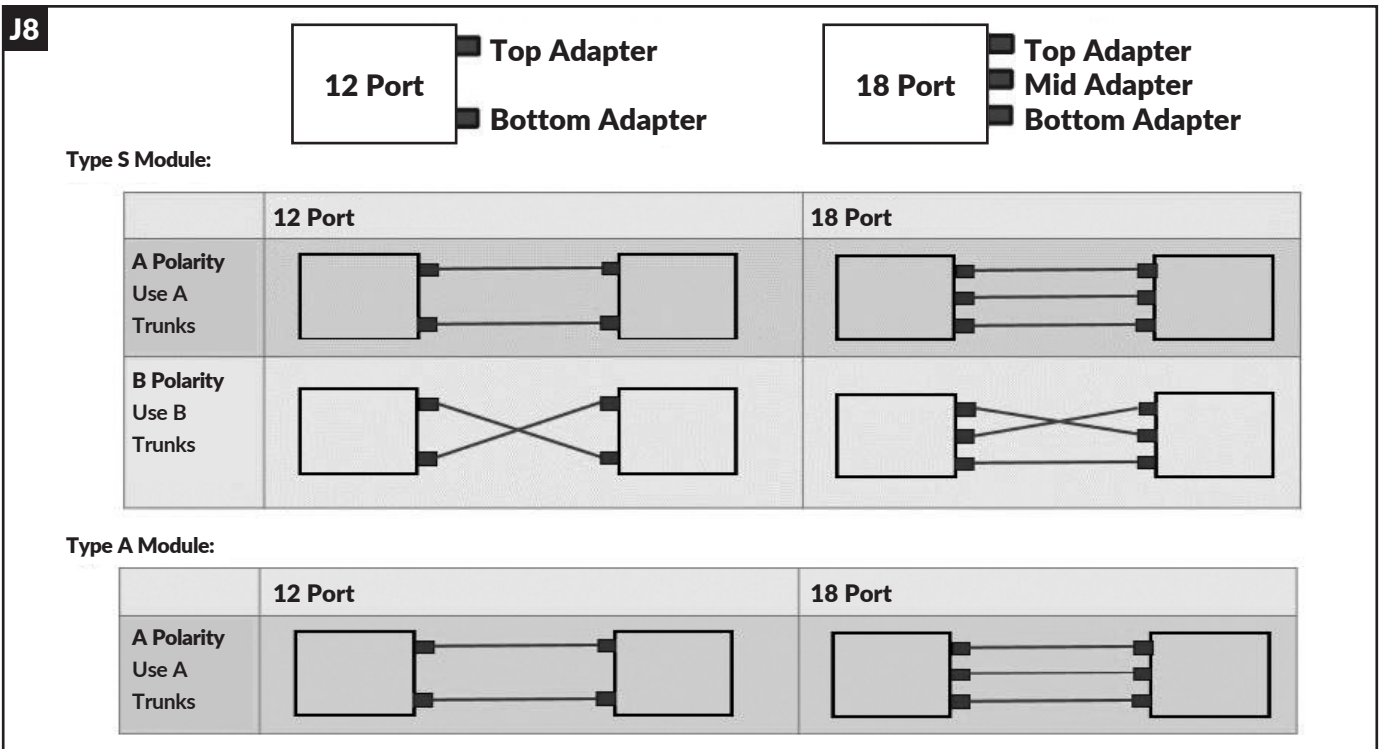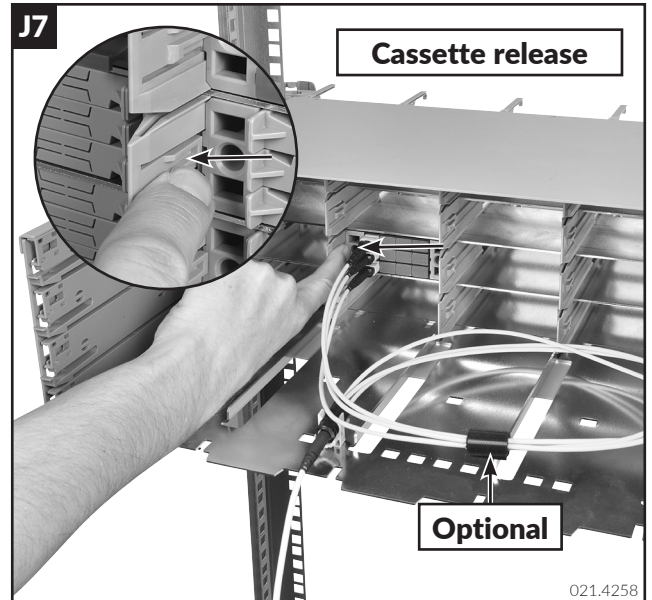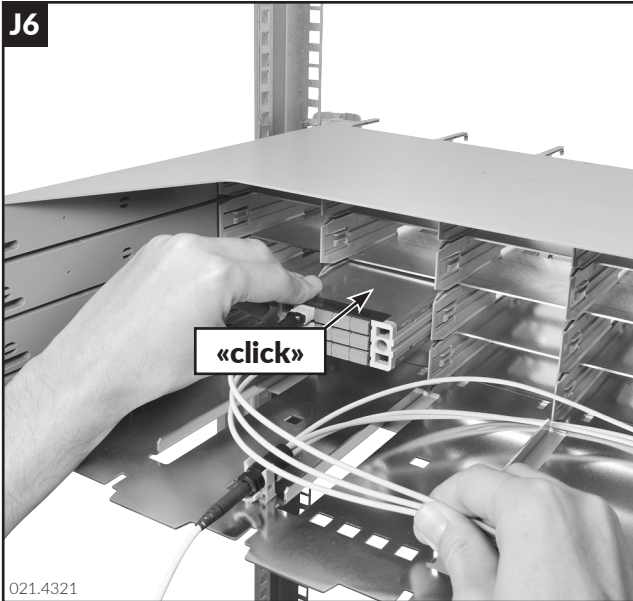

Headquarters

Switzerland

Reichle & De-Massari AG

Binzstrasse 32

CHE-8620 Wetzikon

Telephone HQ +41 (0)44 933 81 11

Telefax HQ +41 (0)44 930 49 41

E-Mail hq@rdm.com

www.rdm.com

