


Installationsanleitung PRIME 1HE Sub-Rack
Installation guide PRIME 1U Sub-Rack
Instructions de montage PRIME 1U Sub-Rack

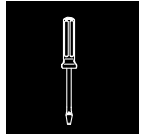

PRIME-1U-Sub-Rack-19"-FM-empty



PRIME-1U-Sub-Rack-19"-BM-empty




PRIME-1U-Sub-Rack-21"-FM-empty



PRIME-1U-Sub-Rack-21"-BM-empty


A - Preparation for front mounting (PRIME BA) / Vorbereitung für die Frontmontage (PRIME BA)

A1

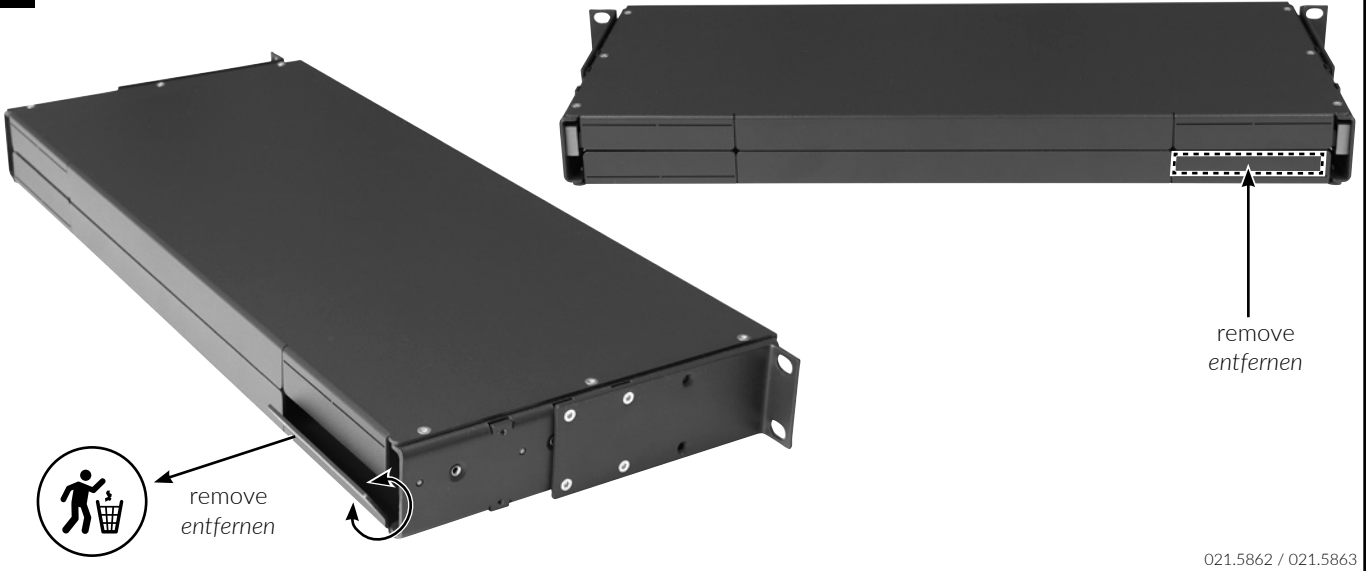


B - Montage im 19"/21" Gestell mit frontseitiger Befestigung / Mounting in 19"/21" Cabinet with front rail fixation


B1

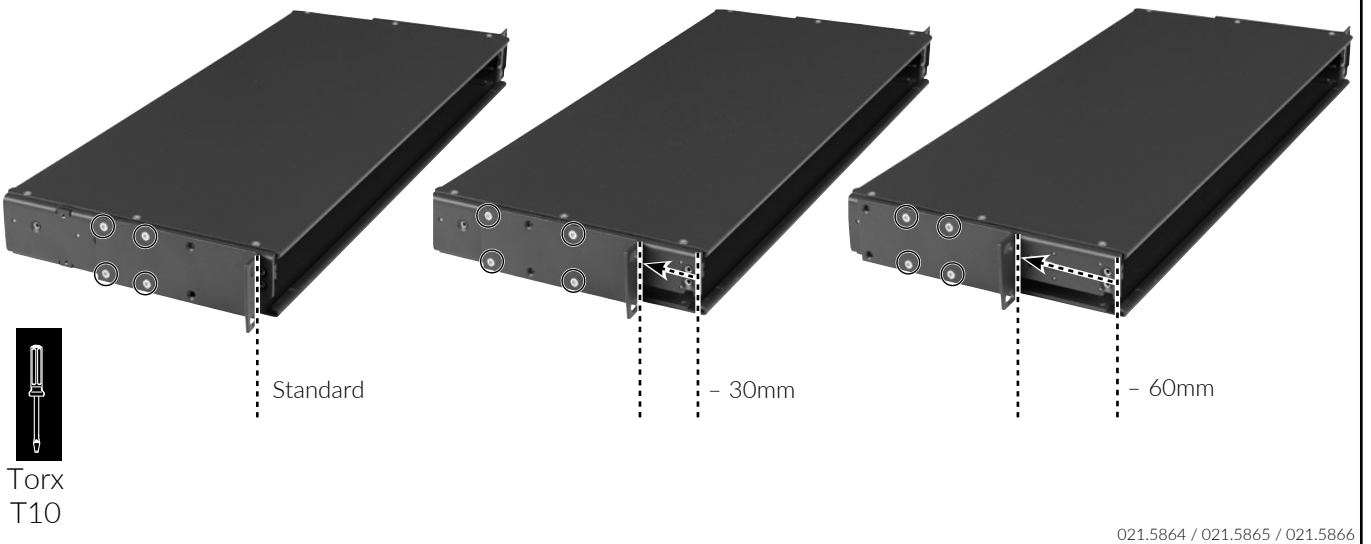



B2

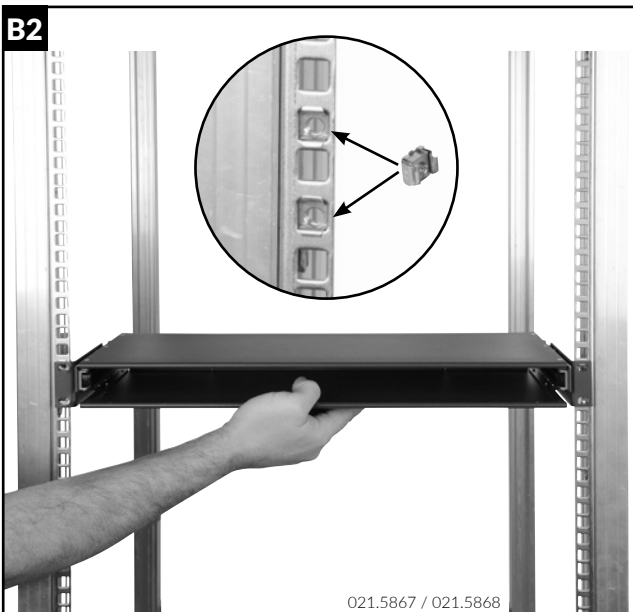

B3

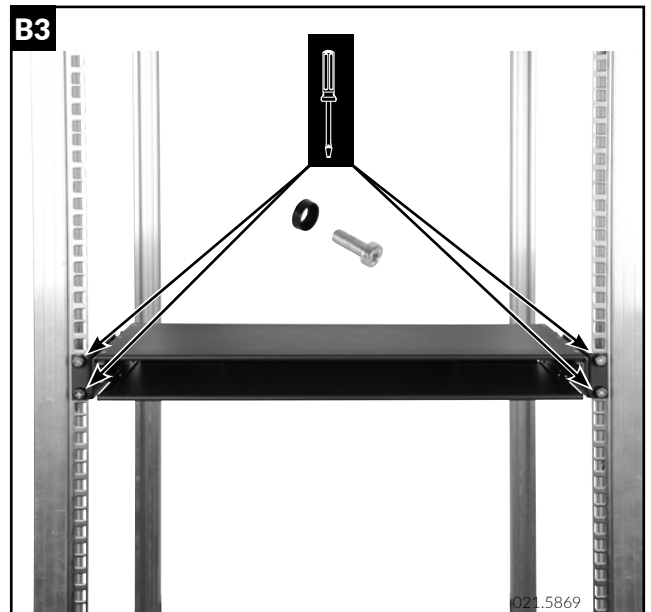

C - Montage im 19"/21" Gestell mit rückseitiger Befestigung / Mounting in 19"/21" Cabinet with back rail fixation

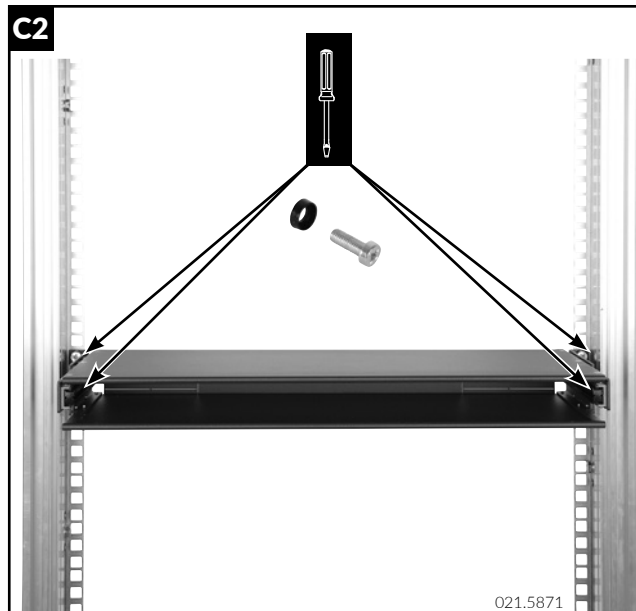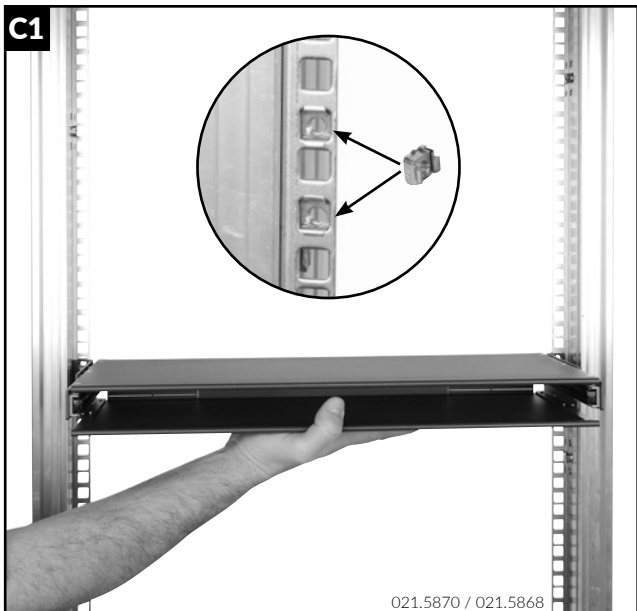

Headquarters

Switzerland

Reichle & De-Massari AG

Binzstrasse 32

CHE-8620 Wetzikon

Telephone HQ +41 (0)44 933 81 11

Telefax HQ +41 (0)44 930 49 41

E-Mail hq@rdm.com

www.rdm.com



Please note:

This guide shows the best practices for installation **ONLY**. R&M expressly disclaims all liability for any damage to material, equipment, and for any injury or death. Legal health and safety regulations should have priority over best practices as shown in this guide. R&M does not guarantee this guide to be free of errors. Products included may vary from products shown. Please exercise caution.