




Installationsanleitung 90° Knickschutz für SC, LC und E-2000™
Installation guide 90° Boot for SC, LC and E-2000™
Instruction de montage soufflet 90° pour SC, LC et E-2000™

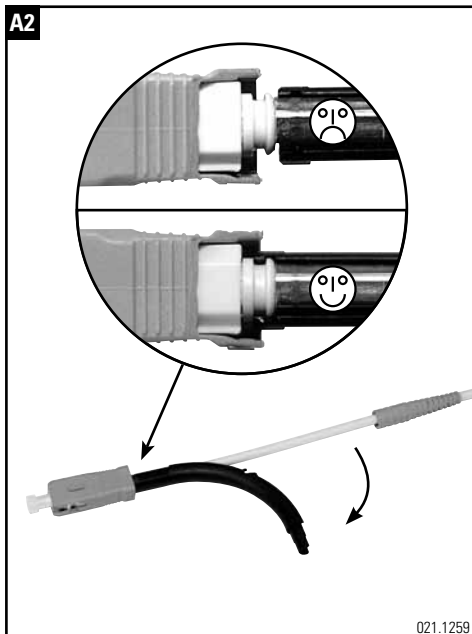


021.1264 / 021.1257

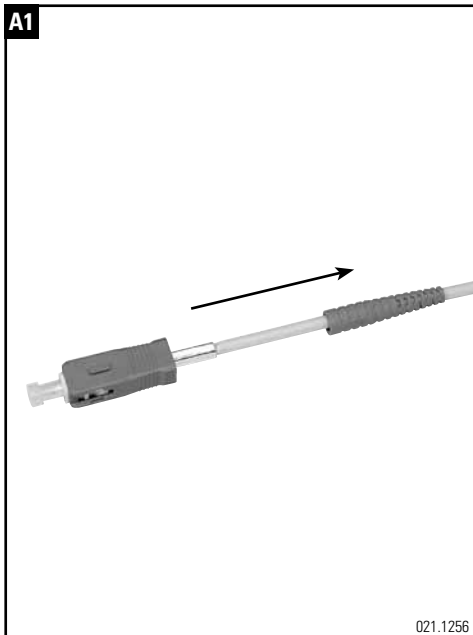


A3

021.1258

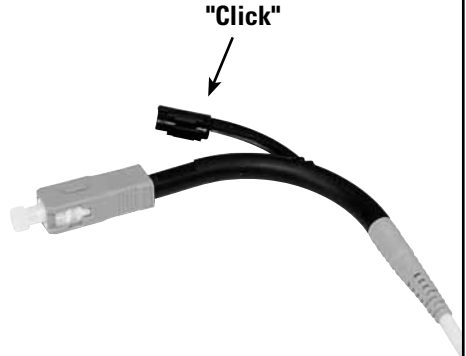A4

021.1260

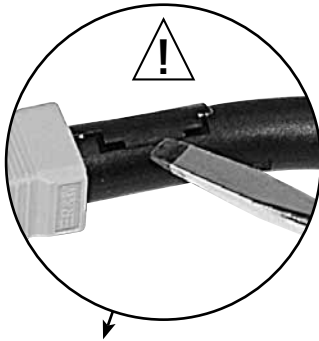B Demontage / Remove

021.1266 / 021.1267

Headquarters**Switzerland**

Reichle & De-Massari AG

Binzstrasse 32

CHE-8620 Wetzikon

Telephone HQ +41 (0)44 933 81 11

Telefax HQ +41 (0)44 930 49 41

E-Mail hq@rdm.comwww.rdm.com**R&M**