
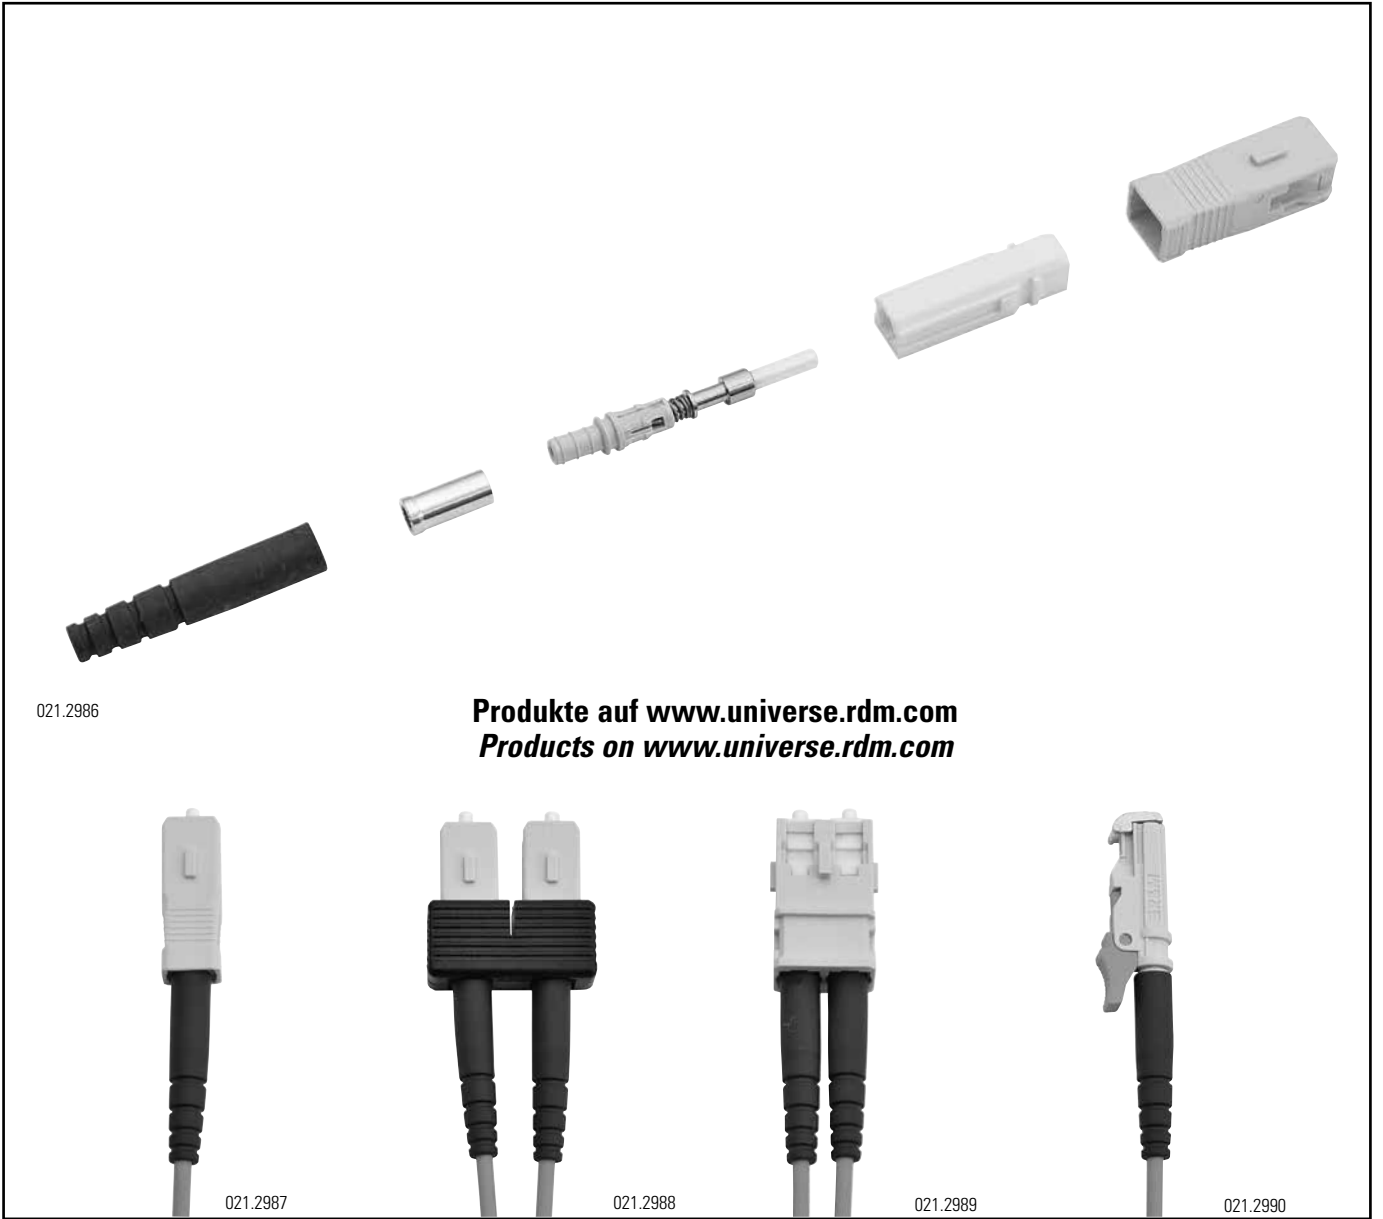


Installationsanleitung PCF Crimp & Cleave
 Installation guide PCF Crimp & Cleave
 Instructions de montage PCF Crimp & Cleave

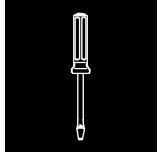

Produkte auf www.universe.rdm.com
 Products on www.universe.rdm.com

A1 Benötigt / Required

R316697
 R803941
 R813172

021.2992


A2 Optional

Kofferset / Suitcase set
 R810636

R812543
 R810638
 R812532


021.2991

A3

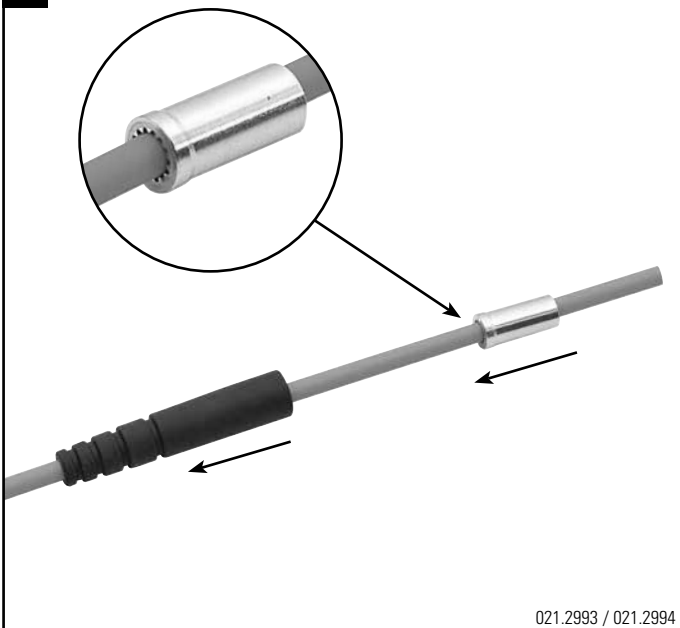


021.2993 / 021.2994

A4

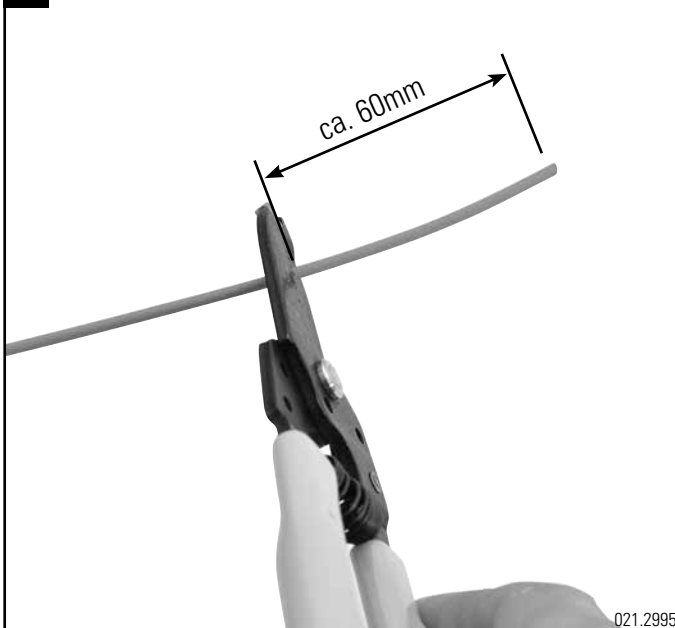


021.2995

A5

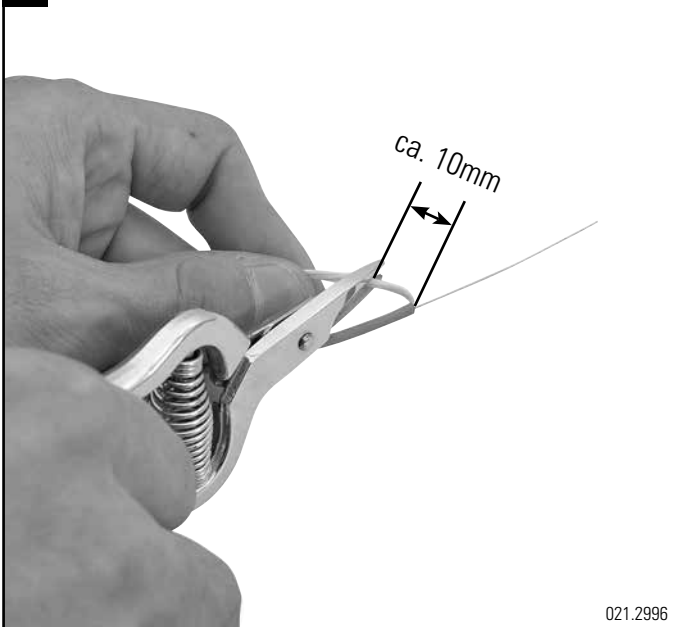


021.2996

A6

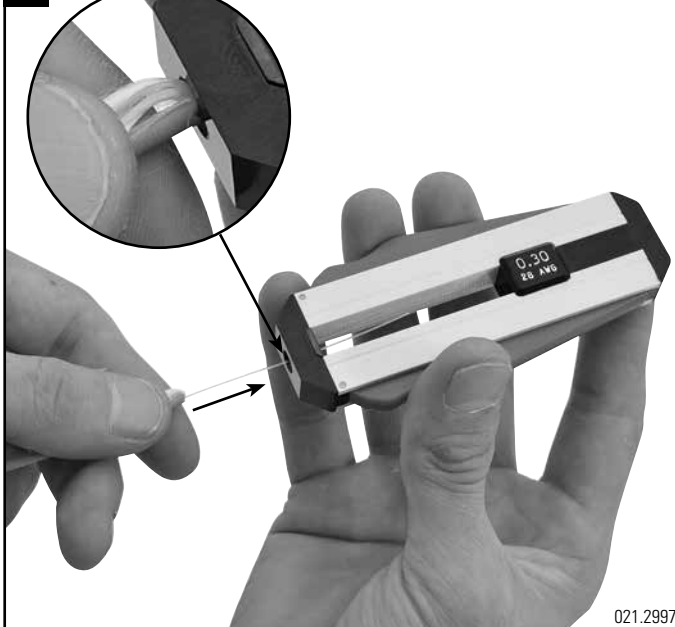


021.2997

A7





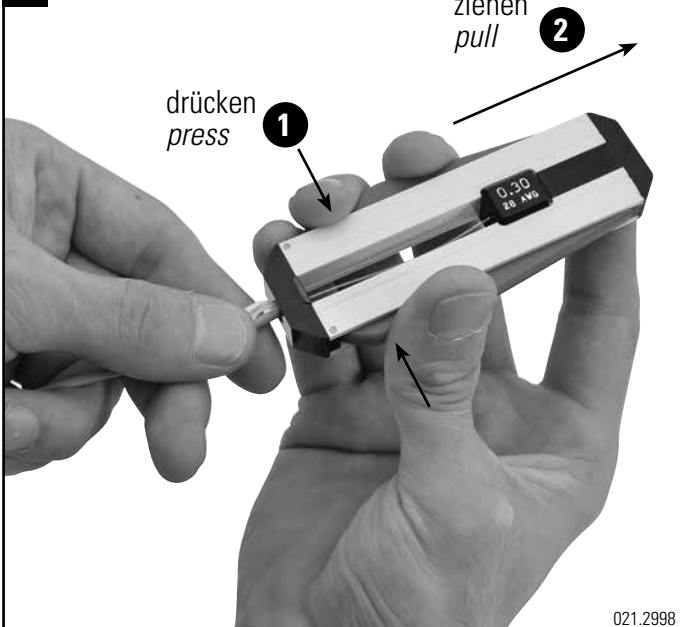


021.2998


A8

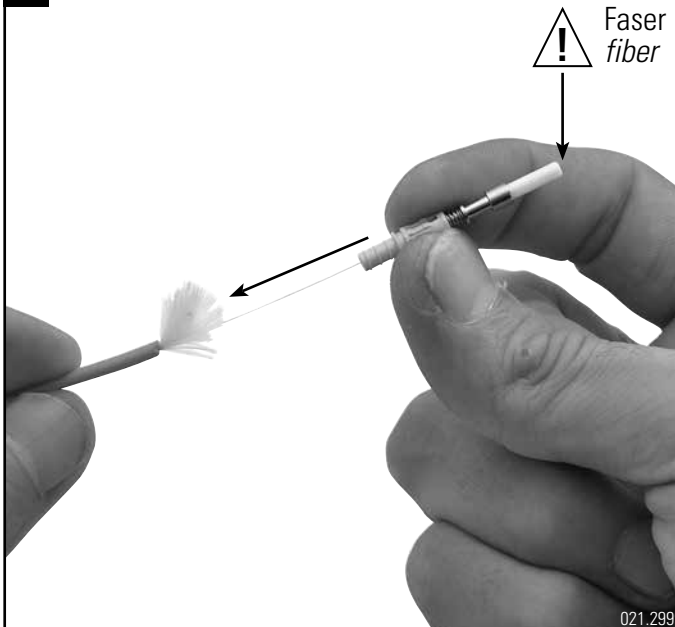

021.2999

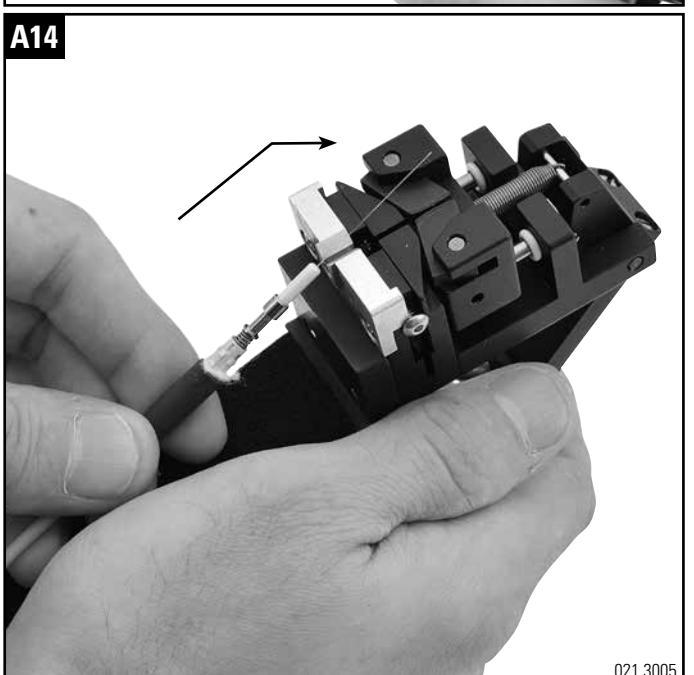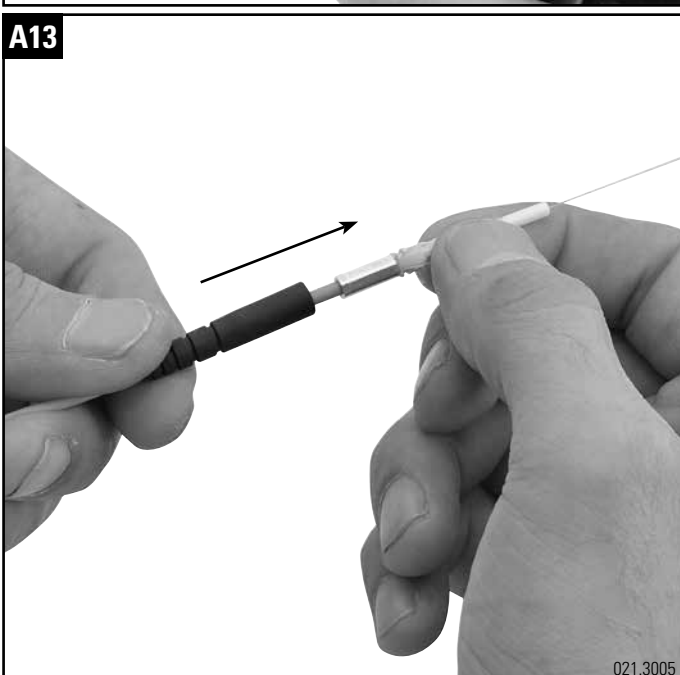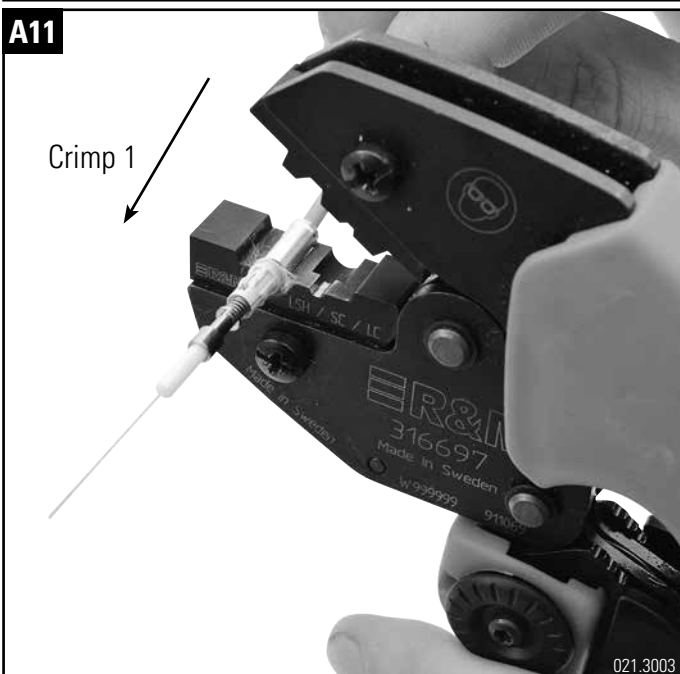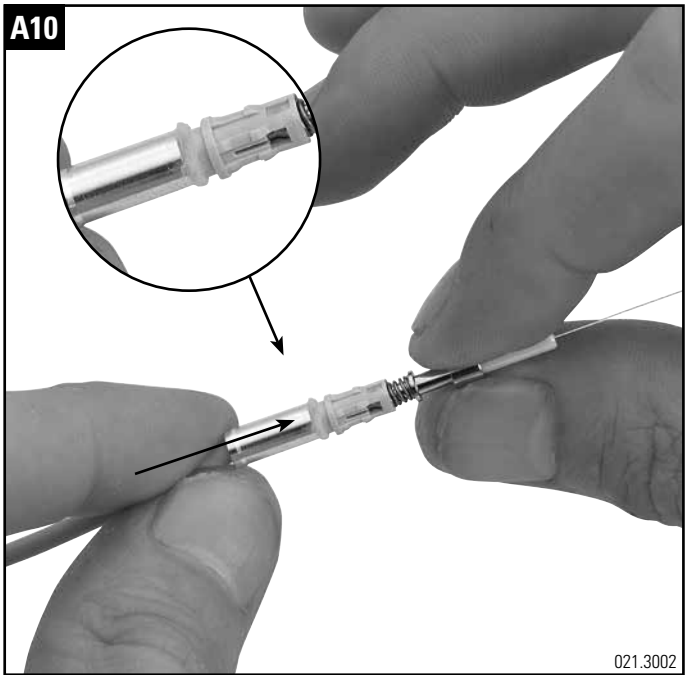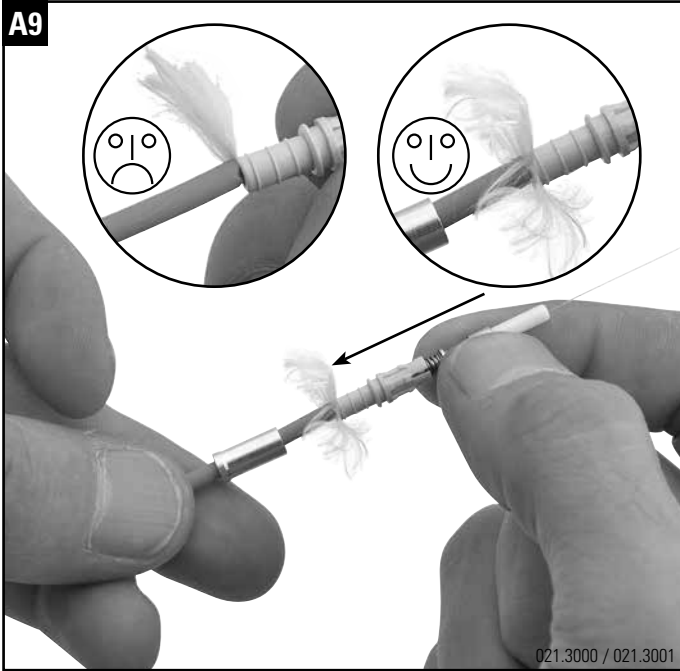


A15

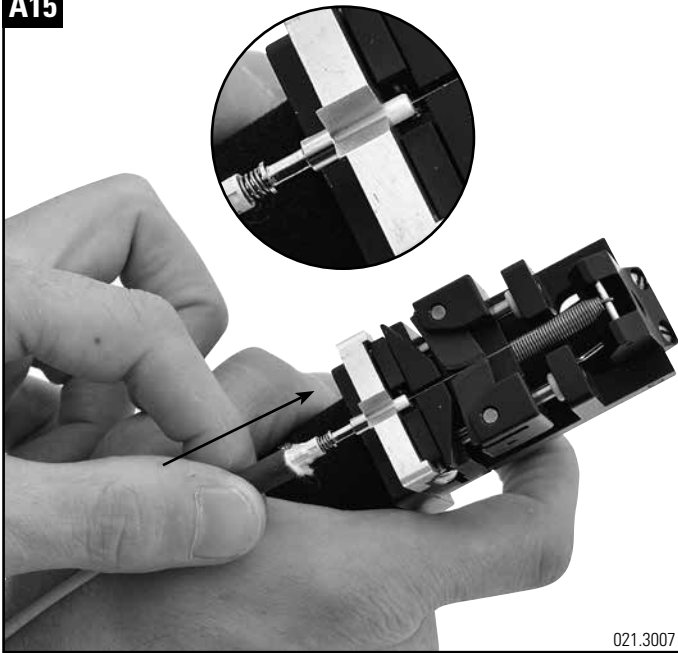

021.3007

A16

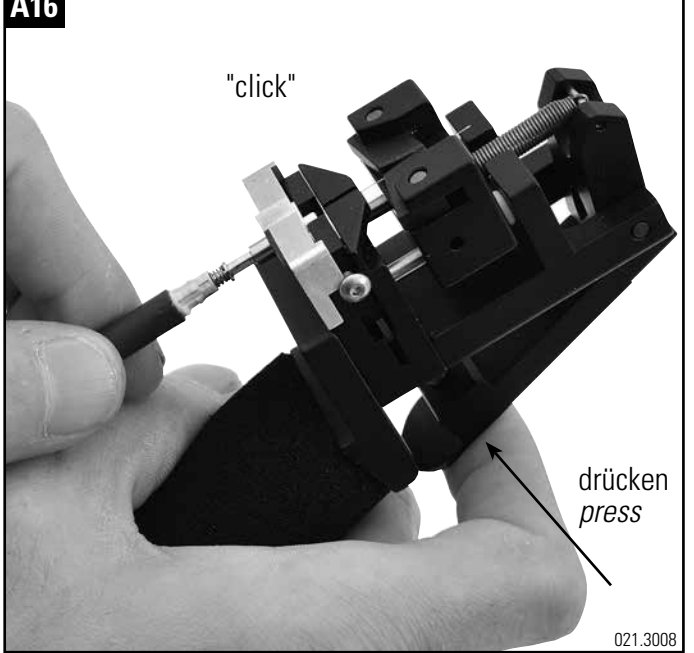


021.3008

A17




021.3009

A18

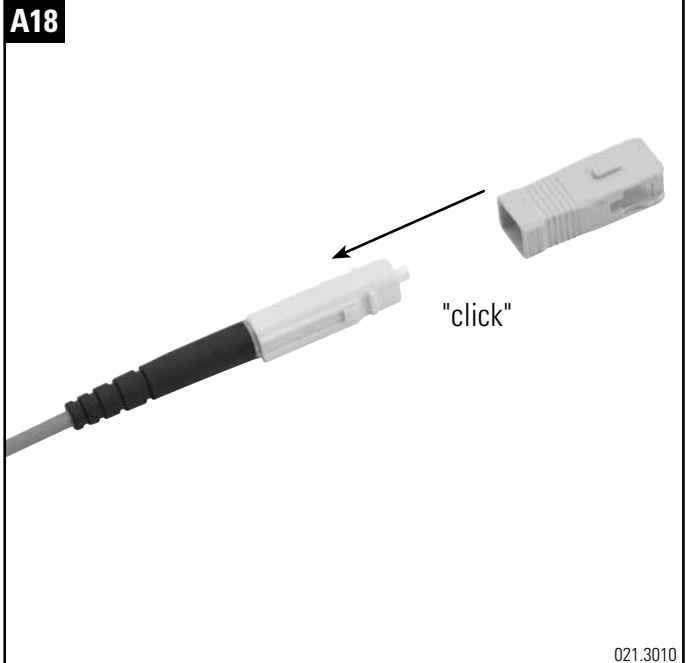

021.3010

B

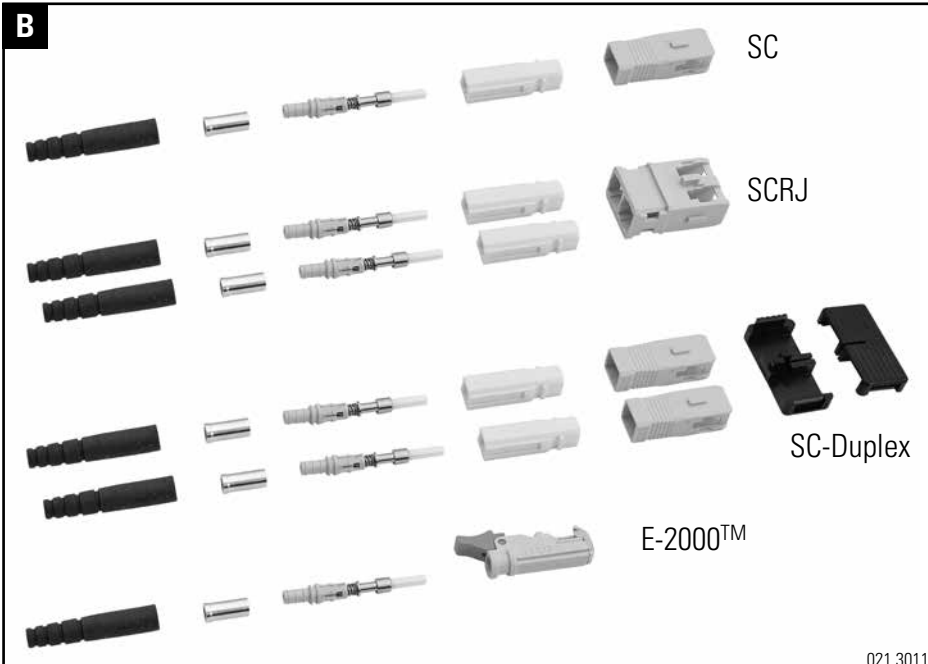

021.3011

Headquarters

Switzerland

Reichle & De-Massari AG

Binzstrasse 32

CHE-8620 Wetzikon

Telephone HQ +41 (0)44 933 81 11

Telefax HQ +41 (0)44 930 49 41

E-Mail hq@rdm.com

www.rdm.com

